


Getting Started with Alcatel LINKZONE 2

GETTING TO KNOW YOUR HOTSPOT

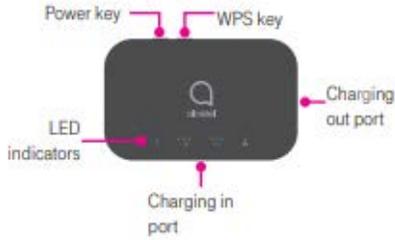

LED DESCRIPTION

Part	Description
Power key	Hold the Power key for 3 seconds to power the device on/off.
WPS key	Hold the WPS key for 3 seconds to activate the WPS function. Once activated, the Wi-Fi LED indicator will flash every 2 seconds. If the network is not accessed within 2 minutes, it will exit WPS mode.
LED indicators	Displays Wi-Fi, signal, battery, and SMS status.
Charging in USB Port	Use the USB Type-C port to charge your device and connect your device to the client via the USB cable.
Charging out USB port	Use the USB port to charge other devices, such as tablets and smartphones.
Reset	Press Reset key for 3 seconds to reset device. All LED indicators will flash blue 2 times to indicate that the device has been reset to factory mode.
Reboot	Hold Power key for 10 seconds to restart device.

TURN ON HOTSPOT

1. Press the **Power** button on the mobile hotspot until all four indicators momentarily flash blue.
2. Wait for the **Network** and **Wi-Fi** Indicators to come on, one at a time.
3. When the Network and Wi-Fi icons light up blue, the Wi-Fi connection is enabled.



TURN OFF HOTSPOT

1. Press the Power button on the mobile hotspot until all four indicators momentarily flash blue.
2. When all four buttons go dark, the Network and Wi-Fi connections have been disabled.

CHARGING YOUR MOBILE HOTSPOT



Charge using a charger and USB data cable. Connect the USB cable into the charging port as shown and connect the charger to a power outlet to start charging. When the device is powered off, it takes about 3 hours before being fully charged. Note: When red battery indicator lights up, device should be charged to protect the battery.

CONNECT YOUR WI-FI DEVICE TO YOUR MOBILE HOTSPOT

1. Press the power button to turn on your hotspot.
2. Locate your hotspot's **Wi-Fi name (SSID)** and **password**. This information is on the label on the back of the hotspot.
3. Open your Chromebook and ensure that it has power.
4. Search for available Wi-Fi networks and click the **Wi-Fi name (SSID)** of your hotspot.
5. Enter the **unique password**.
6. Click **Connect**. The device will connect to the internet and will be labeled "Connected, secure". You will receive a message to Sign into your Chromebook.
7. Login to your Chromebook by using your FWISD student username and password.

WI-FI INDICATOR (BLUE LED)	
Solid Blue	Wi-Fi is active.
Flashing Blue	WPS mode is active.
Signal Indicator (Red or Blue LED)	
Solid Blue	Registered and connected to network. Good coverage: 3 LEDs all light up Middle coverage: 2 LEDs light up Weak coverage: 1 LED lights up
Flashing Blue	Network disconnected.
Solid Red	No network, no SIM card or SIM card error, limited or no service.
Battery Indicator (Red or Blue LED)	
Solid Blue	3 LEDs light up blue: Battery level 80% - 100% 2 LEDs light up blue: Battery level 40% - 79% 1 LED lights up blue: Battery level 15% - 39%
Solid Red	1 LED lights up red: Battery level 0% - 14%.
Flashing	LEDs will flash while charging. Once the battery level is at 100%, 3 LEDs will display solid blue.
SMS Indicator (Blue LED)	
Solid Blue	New message
Slowly Flashing Blue	Message inbox is full.
Off	No new messages.
Fast Flashing Blue	1. New Software version download, or installation, is pending. 2. In process of software update installation.